

Secure the frame to the opening

Using the appropriate fixings attach the frame through both jambs at 450mm centres.


Important

Check the frame is accurately square and plumb. Do not proceed with the installation until the frame is accurately installed.


Once the frame is installed check the rebate dimensions are correct to your chosen configuration of doors from this table.

REBATE SIZES FOR ALL OPTIONS


Door Width	3	4	5	6	6
1'9"	3+0	3+1	5+0	3+3	5+1
1'9"	1611	2144	2677	3210	3210
2'0"	1842	2452	3062	3672	3672
2'3"	2070	2756	3442	4128	4128

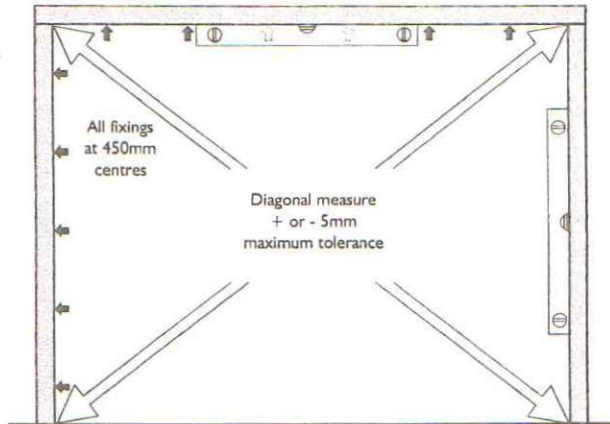

Contents of Kit

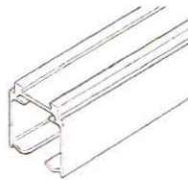


Track 280A

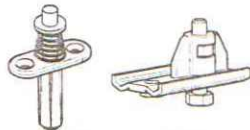

Top pivot 289T



Apron plate and Hanger 283



Bottom pivot 289B



Hinge 282S

